

EE-SX770/771/772/870/871/872(A/P/R)

Thin, Compact Photomicrosensor with Attached Cable

- Next generation design available with NPN or PNP output
- Allows standard M3-screw mounting
- Twenty-four models available in standard, L-shaped, and T-shaped
- UL, EMC and CE approvals
- Each model equipped with a flexible cable that conforms to machine contours
- Compact size allows high-density mounting
- Indicators are visible from both sides
- Readily-visible, molded workpiece insertion mark allows fine-tuning of sensing position



3) (R₂ **(R**₃)

Ordering Information _____

Appearance	Sensing method	Sensing distance	Output configuration		Part number (See Note.)
Standard	Through-beam (slot)	5 mm (0.2 in) (slot width)	NPN	Dark-ON	EE-SX770(A)
		1 1	PNP		EE-SX770(P/R)
		1 1 1	NPN	Light-ON	EE-SX870(A)
TI			PNP		EE-SX870(P/R)
L-shaped]	1	NPN	Dark-ON	EE-SX771(A)
		1	PNP		EE-SX771(P/R)
			NPN	Light-ON	EE-SX871(A)
I		1	PNP		EE-SX871(P/R)

Note: The operation indicator of models with suffix code (A) or (R) will turn ON when the light is interrupted.

(This table continues on the next page.)

Specifications Table - continued from previous page

Appearance	Sensing method	Sensing distance	Output configuration		Part number (See Note.)
T-shaped	Through-beam (slot)	5 mm (0.2 in) (slot width)	NPN	Dark-ON	EE-SX772(A)
		1 1 1	PNP		EE-SX772(P/R)
		1	NPN	Light-ON	EE-SX872(A)
		1 1	PNP		EE-SX872(P/R)

Note: The operation indicator of models with suffix code (A) or (R) will turn ON when the light is interrupted.

Specifications _____

 
Item		Through-beam models(slot)								
Output configuration Dark-ON				Light-ON						
Output		NPN		PNP		NPN		PNP		
Model		EE-SX770 EE-SX771 EE-SX772	EE-SX770A EE-SX771A EE-SX772A	EE-SX770P EE-SX771P EE-SX772P	EE-SX770R EE-SX771R EE-SX772R	EE-SX871	EE-SX870A EE-SX871A EE-SX872A		EE-SX870R EE-SX871R EE-SX872R	
Supply voltage	е	5 to 24 VDC ± 10%, ripple (p-p): 10% max								
Current consumption	NPN models	35 mA max.								
	PNP models	30 mA max.								
Slot width		5 mm								
Standard target object		Opaque: 2 x 0.8 mm min								
Differential travel 0.025 mm										
Control output		NPN open collector output models: At 5 to 24 VDC: 100 mA load current (I _c) with a residual voltage of 0.8 V max. When driving TTL: 40 mA load current (I _c) with a residual voltage of 0.4 V max. PNP open collector output models: At 5 to 24 VDC: 50 mA load current (I _c) with a residual voltage of 1.3 V max.								

(This table continues on the next page.)


Specifications Table - continued from previous page


Item		Through-beam models(slot)								
Output configuration Dark-ON				Light-ON						
Output		NPN		PNP		NPN		PNP		
Model		EE-SX770 EE-SX771 EE-SX772	EE-SX770A EE-SX771A EE-SX772A	EE-SX770P EE-SX771P EE-SX772P	EE-SX770R EE-SX771R EE-SX772R	EE-SX870 EE-SX871 EE-SX872	EE-SX870A EE-SX871A EE-SX872A	EE-SX870P EE-SX871P EE-SX872P	EE-SX870R EE-SX871R EE-SX872R	
Operation in (See Note 1		Red LED is	ON when the	object to be de	tected is not p	resent				
Response fr (See Note 2		1 kHz								
Light source		GaAs infrare	ed LED with a	peak light wav	elength of 940	nm				
Protective ci (See Note 3		Overcurrent protection (built-in circuit)								
Ambient illur	minance	Sensing surface: 1,000 ℓx max with fluorescent light								
Ambient Operating		-25°C to 55°C (-13°F to 131°F)								
temperature	Storage	-30°C to 80°C (-22°F to 176°F)								
Ambient	Operating	5% to 85%								
humidity Storage		5% to 95%								
Vibration res	sistance	Destruction: 20 to 2,000 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions								
Shock resistance		Destruction: 500 m/s ² (50G), three times each in X, Y, and Z directions								
Degree of protection		IEC60529 IP60								
Connection method (standard length)		Pre-wired: 2 m								
Casing mate	erial	PBT (polybutylene terephthalate)								
Cable material PVC (polyvinyl chloride resin)										

- Note: 1. The operation indicator of models with suffix code (A) or (R) will turn ON when the light is interrupted.
 - 2. The response frequency is a value obtained when the EE-SX detects a rotating disc with holes in it, as shown to the right.
 - Operates when the load current exceeds the rated value of 100 mA to inhibit a current flow exceeding 120 mA.




■ SENSING POSITION (EE-SX77/87)

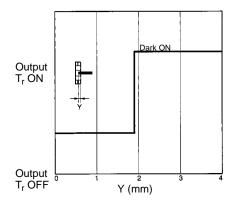

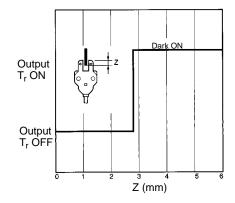

■ REPEATED SENSING POSITION CHARACTERISTICS (TYPICAL)

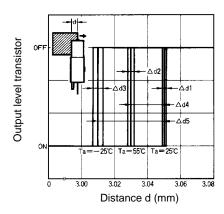

No. of repetitions: 20 at $V_{\rm cc}$ = 12 V

 $\Delta d1 = 0.002 \text{ mm}$

 $\Delta d2 = 0.004 \text{ mm}$

 $\Delta d3 = 0.005 \text{ mm}$

 $\Delta d4 = 0.02 \text{ mm}$

 $\Delta d5 = 0.04 \text{ mm}$

Operation _____

■ OUTPUT CIRCUITS

Output configuration	Model	Output transistor operation	Timing Charts		Output Circuit
NPN Output	EE-SX770 EE-SX771 EE-SX772 EE-SX770A EE-SX771A EE-SX772A	Dark-ON	Operation indicator (red) Output transistor Load (e.g., relay)	Incident Interrupted ON OFF ON OFF Operate Reset	Operation Load (e.g., relay) Black 5 to 24 VDC
	EE-SX870 EE-SX871 EE-SX872 EE-SX870A EE-SX871A EE-SX872A	Light-ON	Operation indicator (red) Output transistor Load (e.g., relay)	Incident Interrupted ON OFF ON OFF OPERATE Operate Reset	(Red) Main circuit 100 mA max.
PNP Output	EE-SX770P EE-SX771P EE-SX772P EE-SX770R EE-SX771R EE-SX772R	Dark-ON Light-ON	Operation indicator (red) Output transistor Load (e.g., relay)	Incident Interrupted ON OFF ON OFF Operate Reset Incident	Operation indicator Control output Black 50 mA max.
	EE-SX871P EE-SX872P EE-SX870R EE-SX871R EE-SX872R	Light-ON	Operation indicator (red) Output transistor Load (e.g., relay)	ON OFF Operate Reset	circuit 5 to 24 VDC Load (e.g., relay) Blue


Dimensions

Unit: mm (inch)

STANDARD MODELS

EE-SX770 EE-SX870 EE-SX770A EE-SX870A EE-SX770P EE-SX870P EE-SX770R EE-SX870R




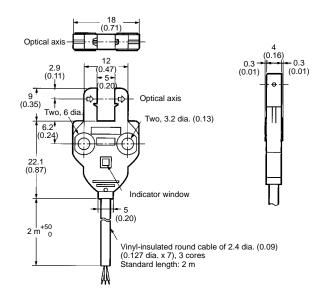

■ L-SHAPED MODELS

EE-SX771 EE-SX871 EE-SX771A EE-SX871A EE-SX771P EE-SX871P EE-SX771R EE-SX871R




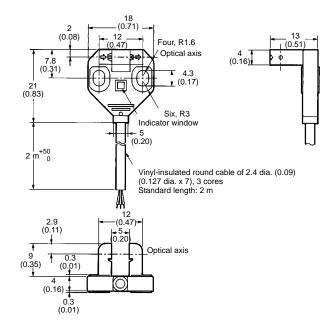

■ T-SHAPED MODELS

EE-SX772 EE-SX872 EE-SX772A EE-SX872A EE-SX772P EE-SX872P EE-SX772R EE-SX872R



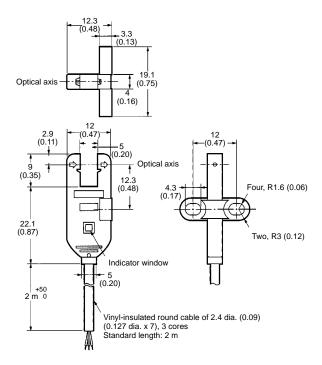

Precautions

MOUNTING

- The EE-SX77/87 is a photomicrosensor that should be built into equipment. For this reason, no special protective measures have been taken to protect the EE-SX77/87 from external light disturbance. Avoid malfunction by ensuring that the EE-SX77/87 is not influenced by incandescent lamps or other light sources that may cause external light distur-
- Mount the photomicrosensor securely to flat plates. The characteristics of the through-beam sensor change if the slot is deformed.
- Use M3 screws when mounting the EE-SX77/87. Be sure to use spring washers with the screws, so that the screws will not loosen. The tightening torque applied to each screw must be no more than 0.59 N • m (6 kgf • cm).
- Make sure that nothing will come into contact with the sensing element of the sensor. If the sensing element has scratch damage, the operating characteristics of the photomicrosensor will decrease.
- Securely mount the EE-SX77/87 to prevent loosening by vibration or shock.

 
OPERATING ENVIRONMENT

- Do not connect the EE-SX77/87 while power is applied, or the EE-SX77/87 may be damaged.
- Do not install the EE-SX77/87 in the following locations to avoid malfunction or damage:
 - A. Locations with excessive dust
 - B. Locations with corrosive gas
 - C. Locations where water, oil, or chemicals are directly
 - D. Locations exposed to direct sunlight
- Make sure that the operating ambient temperature is within the rated range.
- The photomicrosensor may be soluble in organic solvent. acid, and alkaline, aromatic hydrocarbon, and chlorinated aliphatic hydrocarbon solvents. The characteristics of the photomicrosensor may decrease as a result. Make sure that the photomicrosensor is free from these solutions.


riangle!\ Caution

TO AVOID DAMAGE


Do not use the EE-SX77/87 at voltage exceeding the rated voltage range.



 Do not make mistakes in wiring, such as mistakes in polarity.



 
Do not short-circuit the load (i.e., do not connect a power supply directly to the Sensor) as shown below.




■ WIRING

For Surge Prevention

 If the power supply has surge voltage, connect a Zener diode with standing 30 to 35 V or a 0.1 to 1- μ F capacitor in parallel to the power supply to absorb the surge voltage.



 
If the load is a relay or other small inductive load, connect it to the EE-SX77/87 as shown below. You must connect a diode for counter-voltage absorption.



Do not route power lines or high-tension lines in the same conduit with the EE-SX77/87 to avoid damage or malfunction due to induction.

Voltage Output

 A photomicrosensor with open collector output can be connected to a device with voltage-input specifications by connecting a resistor between the power supply and output terminals, as shown in the following circuit diagram. The value of the resistor is normally 4.7 k Ω and must withstand a power of 0.5 W at 24 V and 0.25 W at 12 V.



• EE-SX77/87 series NPN models with a 4.7-k Ω resistor.


High level:

Input voltage (V_H) =
$$\frac{Z}{R+Z}$$
 V_{CC} = $\frac{4.7 \text{ k}}{4.7 \text{ k} + 4.7 \text{ k}}$ x 24 V = 12 V

Low level:

Input voltage $(V_I) \le 0.4 \text{ V}$

Load current (I_C) =
$$\frac{V_{CC}}{R}$$
 = $\frac{24 \text{ V}}{R}$ = 5.1 mA \leq 100 mA

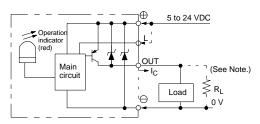

Note: When using a voltage output, always insert a resistor in $R_{\rm I}$.

Note: Refer to the ratings of the photomicrosensor for the relationship between the residual voltage and load current.

OMRON ELECTRONICS, INC.
One East Commerce Drive
Schaumburg, IL 60173

OMRON CANADA, INC. 885 Milner Avenue Scarborough, Ontario M1B 5V8 416-286-6465

1-800-55-OMRON